

INSTALLATION INSTRUCTIONS FOR THE FORD® COIL PIT SETTER

Refer to the Ford® website (www.fordmeterbox.com) for additional and most recent installation instructions and product information.

1. Dig trench to proper depth for Coil Pit setter and lid, also allow for bottom support/drainage.
2. Place well-compacted crushed stone or an even layer of concrete blocks/pavers in the bottom of hole; if using a bottom plate, place in hole before installing the Coil Pit setter.
3. Lower the pit setter in the hole so that the top edge is flush with grade level.
4. Connect the inlet and outlet service lines to the appropriate connection as marked on the tile by placing an additional wrench on the wrench flats of the MIP fitting to avoid unintentional twisting of the coil tubing. **Do not use a pipe wrench.**
5. Pressure test the Coil Pit Setter prior to backfilling to ensure all valves and joints are secured tightly and no leaks are detected.
6. **IMPORTANT:** Carefully backfill around the tile using a suitable granulated compactible material, 12" at a time, tamping each layer uniformly. Improper backfill may distort tile, resulting in immobility of the meter mounting platform.

PRECAUTIONS

1. Do not kink, fold, or over-stress the coil tube or damage may result. Avoid cuts, nicks and abrasions to the coil tube as they may affect service life and pressure integrity. Damaged coils should be replaced.
2. Be sure to lift the meter mounting platform just past both locking brackets. Rest the platform on the locking brackets and engage the notch of the platform onto one of the locking brackets. This secures the assembly while servicing the meter.
3. Ford's flat lid should be placed properly on the tile after each entry. Locking lid should have the lug and locking mechanism aligned within the tile's locking brackets to secure lock.
4. Meter mounting platform should be completely lowered to the lower support bracket when meter is not being serviced.
5. Store Coil Pit Setter in upright position, do not stack on its side.
6. Idlers are shipped assembled hand tight and must be tightened prior to pressurizing.

WARRANTY – READ BEFORE INSTALLATION

All merchandise is warranted to be free from defects in materials and factory workmanship. We will provide, free of charge, new products in equal quantities for any that prove defective within one year from date of shipment from our factory. Manufacturer shall not be liable for any loss, damage, or injury, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for his intended use and user assumes all risk and liability whatever in connection therewith. No claims for labor or consequential damage will be allowed. The foregoing may not be changed except by agreement signed by an officer of the manufacturer.

No other warranties are applicable or may be implied, including the implied warranty of merchantability and the implied warranty of fitness for particular purpose and any warranty relating to infringement or the like, all of which are disclaimed.

DAMAGE CAUSED BY IMPROPER TOOLS OR HANDLING WILL VOID OUR WARRANTY

THE FORD METER BOX COMPANY, INC.

P.O. Box, Wabash, Indiana, USA 46992-0443

Phone:260-563-3171 - Domestic FAX:800-826-3487

Overseas FAX:260-563-0167 - www.fordmeterbox.com

