

10" - 12" / SERIES UFRCS1300

ASSEMBLY INSTRUCTIONS FOR RESTRAINED CASING SPACER / SUPPORT OF PIPE BARREL


Refer to the Ford website (http://www.fordmeterbox.com) for additional and most recent installation instructions and product information.

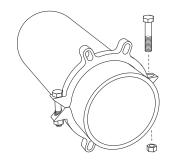


 Assemble UFR1300 restraint ring onto pipe, tighten clamping bolts evenly to 200 ft-lbs.

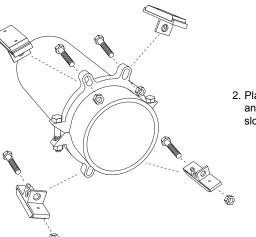

Place the runner on the restraint ring ear and slide the hex head bolt through the slot. Tighten the hex nut securely.

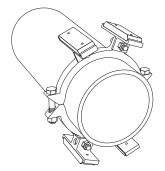

3. Assembled support for Pipe Barrel should appear as shown.

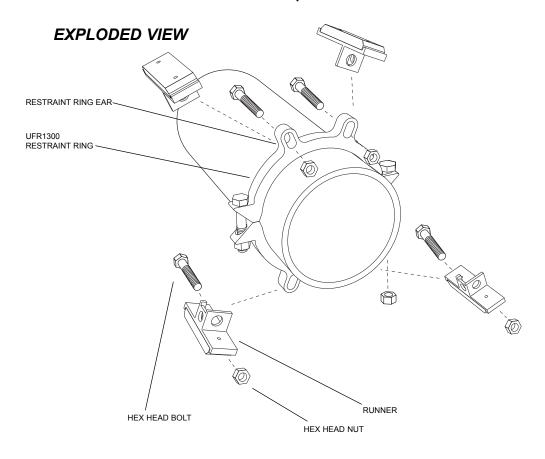

PARTS LIST

- 1 UFR1300 RESTRAINT
- 4 RUNNERS
- 4 RESTRAINT HEX HEAD BOLTS
- 4 HEX NUTS