


INSTALLATION PROCEDURE





Ford Style FSC1-R Single Armor Wrap Clamps

(See Other Side for FSC1-R2 Dual Armor Wrap Clamps)

PREPARATIONS:

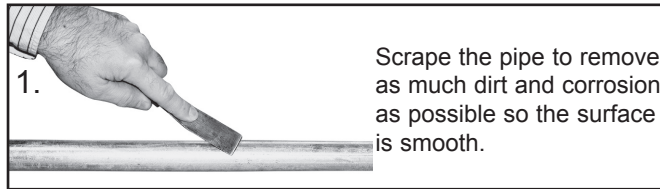

ASSEMBLY:

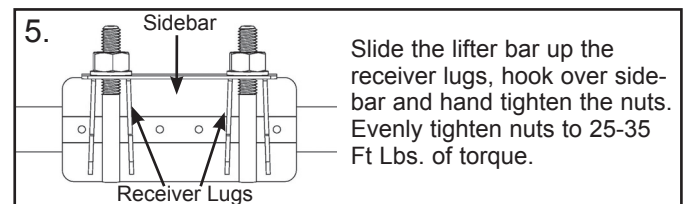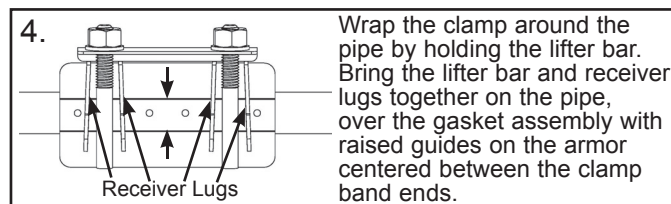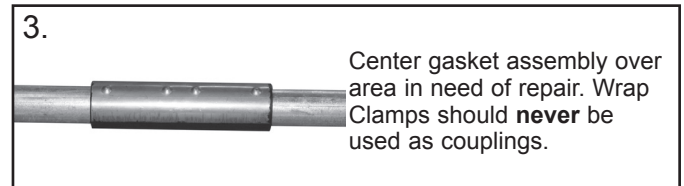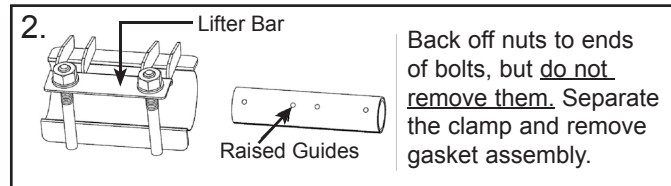

The Ford Meter Box Co., Inc. 775 Manchester Avenue, P.O. Box 443, Wabash, Indiana, USA 46992-0443
Telephone: 260-563-3171 FAX: 800-826-3487 Overseas FAX: 260-563-0167 <http://www.fordmeterbox.com>

FORM # 91937-99


03/15

INSTALLATION PROCEDURE





Ford Style FSC1-R2 Dual Armor Wrap Clamps

(See Other Side for FSC1-R Single Armor Wrap Clamps)

PREPARATIONS:

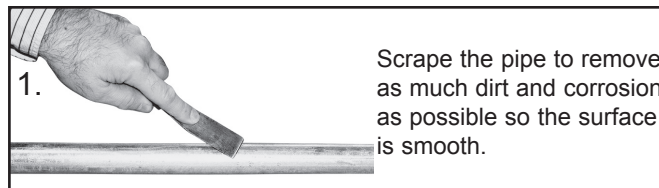

ASSEMBLY:

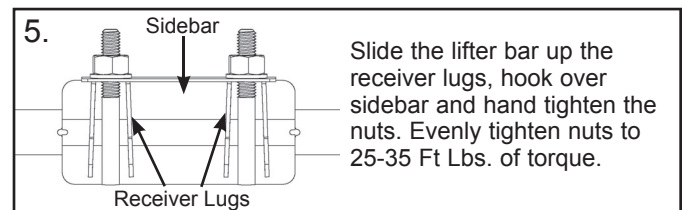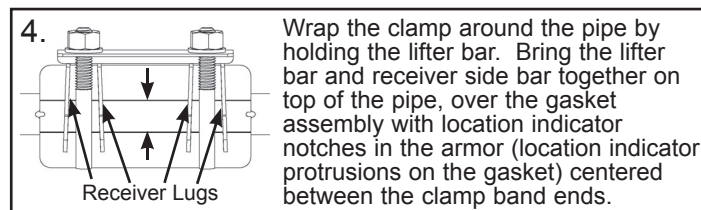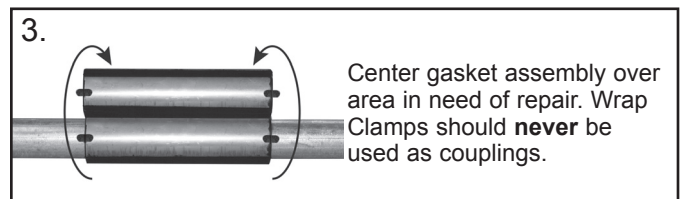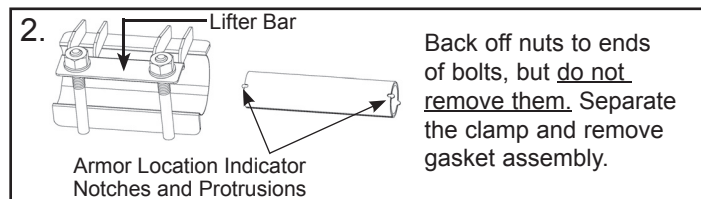

The Ford Meter Box Co., Inc. 775 Manchester Avenue, P.O. Box 443, Wabash, Indiana, USA 46992-0443
Telephone: 260-563-3171 FAX: 800-826-3487 Overseas FAX: 260-563-0167 <http://www.fordmeterbox.com>

FORM # 91937-99

03/15