


Repair Kit for Ford Dual Cartridge Check Valves 3/4" & 1" HHCA Angle Style 3/4" & 1" HHC Straight Style

Catalog Numbers:
HHCRK-3 for 3/4", **HHCRK-4** for 1"
HHCCRK-3 for 3/4", **HHCCRK-4** for 1"

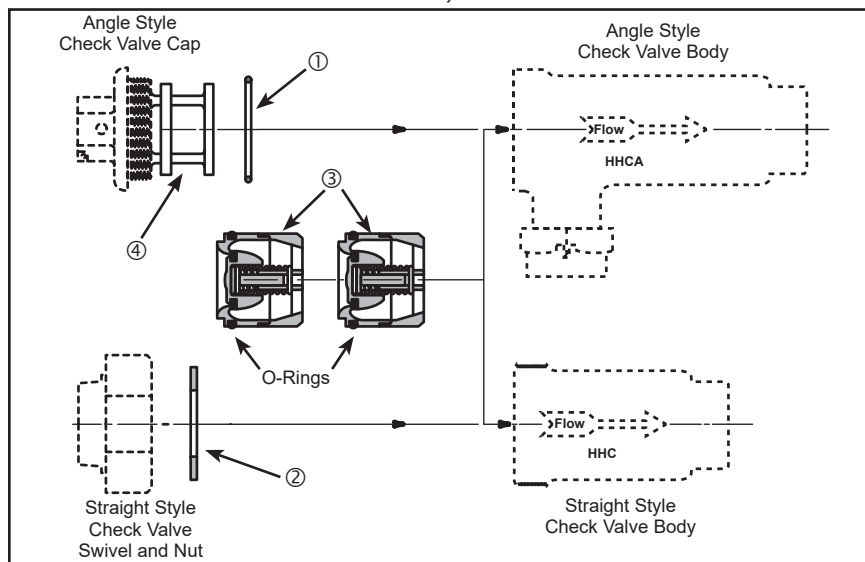

Item	Description	Quantity
1	HHCA Access Cap O-Ring (Angle Style)	1
2	HHC Flat Gasket (Straight Style)	1
3	Check Valve Assembly Cartridge	2
4	HHCA Plastic Cartridge Spacer	1


1. Remove existing components from check valve. Also remove any accumulations, and inspect for wear or damage preventing proper check valve function.
2. Lubricate the cartridge check O-rings with an FDA approved silicone grease.
3. Insert cartridges ③ into the valve body so that the checks open in the direction of normal water flow.
4. Replace HHCA Access Cap O-ring ① — or —
5. Replace HHC Swivel flat gasket. ②
6. Discard unused O-ring or gasket.
7. If the old cartridge spacer ④ is made of plastic, remove it from the cap and **LIGHTLY** press-fit the new cartridge spacer ④ into angle style (HHCA) check valve cap.
8. Reassemble access cap or swivel to valve body and check for leaks.



The Ford Meter Box Company, Inc.
775 Manchester Avenue, P.O. Box 443,
Wabash, Indiana 46992-0443 USA
Phone: 260-563-3171 • FAX: 800-826-3487
Overseas FAX: 260-563-0167
www.fordmeterbox.com

Repair Kit for Ford Dual Cartridge Check Valves 3/4" & 1" HHCA Angle Style 3/4" & 1" HHC Straight Style

Catalog Numbers:
HHCRK-3 for 3/4", **HHCRK-4** for 1"
HHCCRK-3 for 3/4", **HHCCRK-4** for 1"

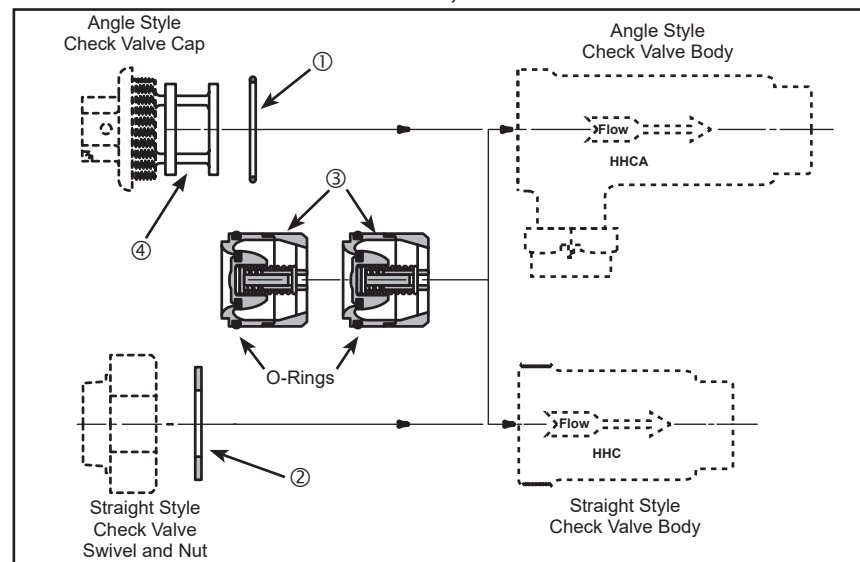

Item	Description	Quantity
1	HHCA Access Cap O-Ring (Angle Style)	1
2	HHC Flat Gasket (Straight Style)	1
3	Check Valve Assembly Cartridge	2
4	HHCA Plastic Cartridge Spacer	1

1. Remove existing components from check valve. Also remove any accumulations, and inspect for wear or damage preventing proper check valve function.
2. Lubricate the cartridge check O-rings with an FDA approved silicone grease.
3. Insert cartridges ③ into the valve body so that the checks open in the direction of normal water flow.
4. Replace HHCA Access Cap O-ring ① — or —
5. Replace HHC Swivel flat gasket. ②
6. Discard unused O-ring or gasket.
7. If the old cartridge spacer ④ is made of plastic, remove it from the cap and **LIGHTLY** press-fit the new cartridge spacer ④ into angle style (HHCA) check valve cap.
8. Reassemble access cap or swivel to valve body and check for leaks.



The Ford Meter Box Company, Inc.
775 Manchester Avenue, P.O. Box 443,
Wabash, Indiana 46992-0443 USA
Phone: 260-563-3171 • FAX: 800-826-3487
Overseas FAX: 260-563-0167
www.fordmeterbox.com